

ultravent[®]

Installation instructions

1. Choose a suitable location for the Ultravent.

Installation should be through an exterior wall towards an upper or lower corner of the room.

2. Create a suitable aperture through the wall.

A 127mm core drilled aperture is required.

3. Locate the Ultravent through the aperture.

Cut to length and fit the internal grill and external cowl tightly against the wall surfaces.

Seal around the Ultravent as required.



Clean filter with a damp cloth and replace every 2 years.

Full product data sheet & replacement filters available from your Ultravent stockist.